

6-3. Initialization

Items to initialize

The following items must be initialized for normal system operation in cases such as after the battery is reconnected, or maintenance is performed on the vehicle.

Item	When to initialize	Reference
Power window	<ul style="list-style-type: none"><li>• After reconnecting or changing the battery</li><li>• After changing a fuse</li></ul>	P. 40
Power back door	<ul style="list-style-type: none"><li>• After reconnecting or changing the battery</li><li>• After changing a fuse</li></ul>	P. 12
Moon roof (multi-panel type only)	<ul style="list-style-type: none"><li>• After reconnecting or changing the battery</li><li>• After changing a fuse</li></ul>	P. 43
Engine oil maintenance data	After changing engine oil	P. 292
Tire pressure warning system	<ul style="list-style-type: none"><li>• When the standard tire inflation pressure changes by replacing tires or wheels</li><li>• When tires are rotated</li><li>• When tire pressure sensors are replaced</li><li>• When driving with the tires inflated to a higher than standard tire inflation pressure</li></ul>	P. 304